



INSTALLATION
TO START
FROM LEFT
CORNER



XF + TR 24" X 12"
PRE-VEGETATED MODULE

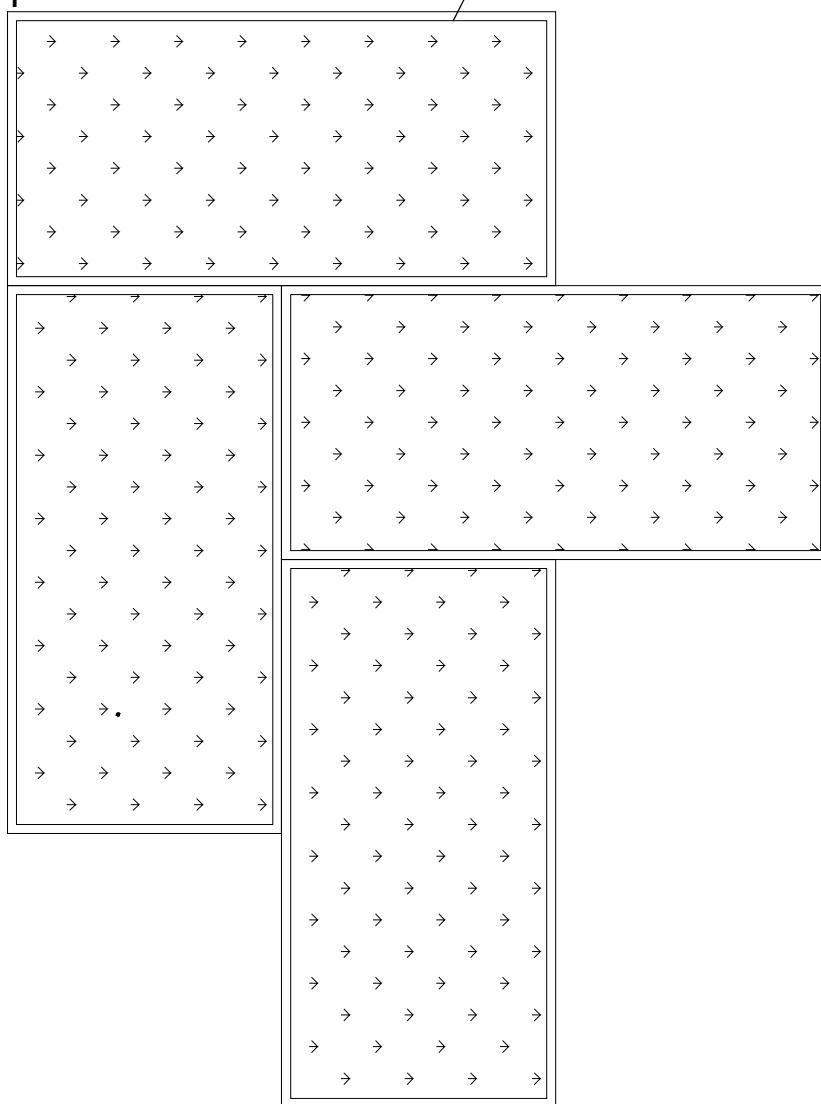

NOTE:

- 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.
- 2- INSTALL INSULATION DIRECTLY ON TOP OF ROOT BARRIER
- 3- ROOF INSULATION NOT TO SCALE



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

NORTH
AMERICA

XF+TR SYSTEM

Tray Detail

SCALE N/A

©2020


XF+TR SYSTEM

XF 504, MODULAR TRAY

SPRAY BODY,
ROTARY IRRIGATION SYSTEM

XF 604,
EDGING RESTRAINT

XF 100 SERIES, ROOT BARRIER
ROOFING SYSTEM

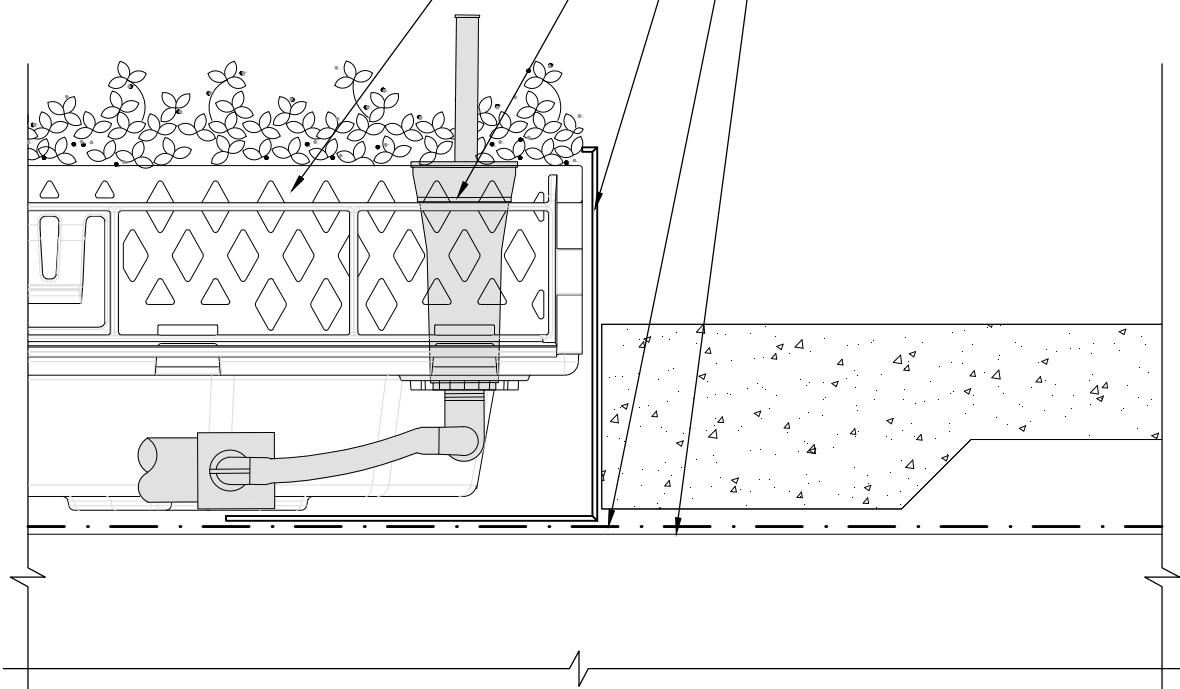

NOTE:

1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

NORTH
AMERICA


XF+TR SYSTEM

Integrated with Irrigation System



SCALE 1:2

©2020

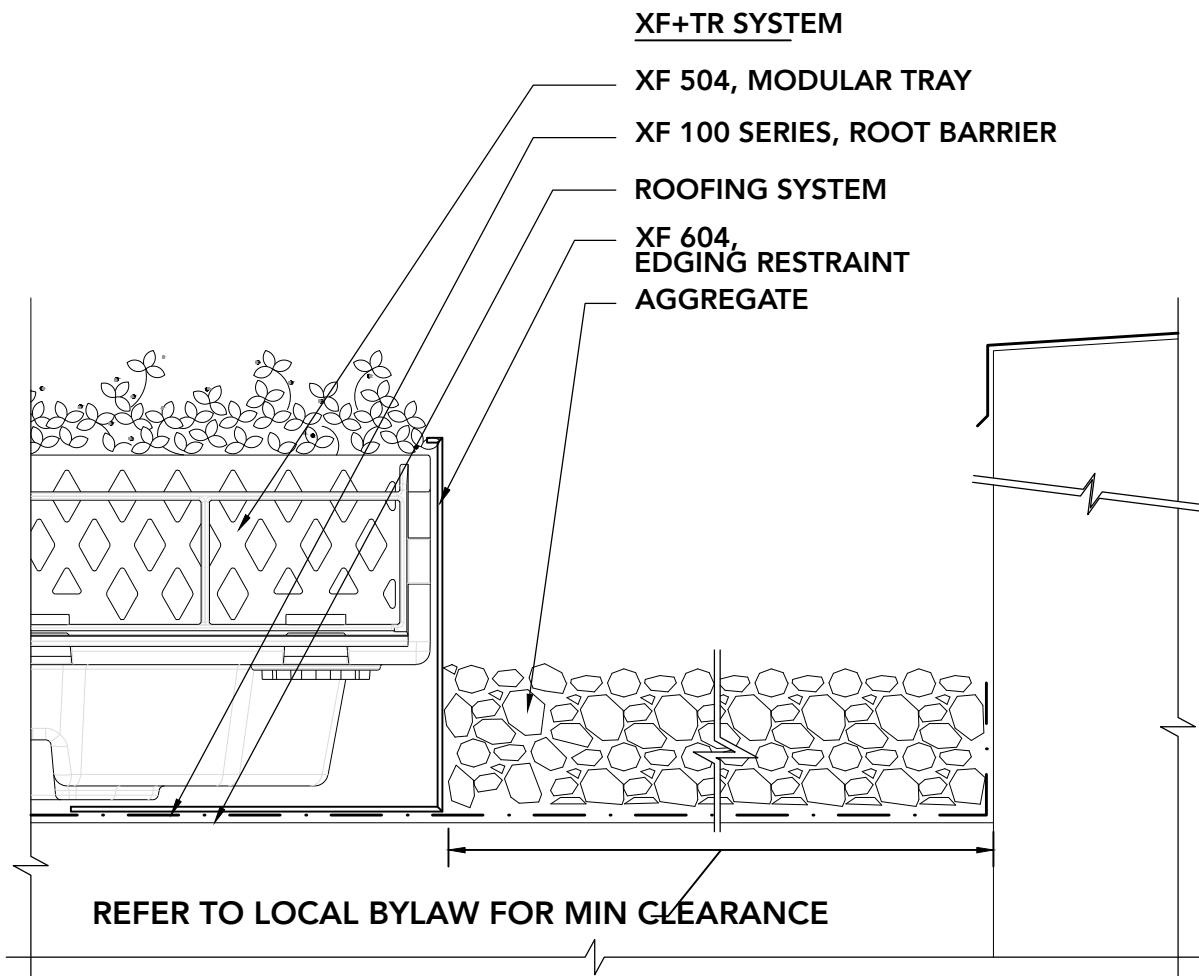

NOTE:

1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

NORTH
AMERICA


XF+TR SYSTEM

Detail at Roof Parapet



SCALE 1:2

©2020

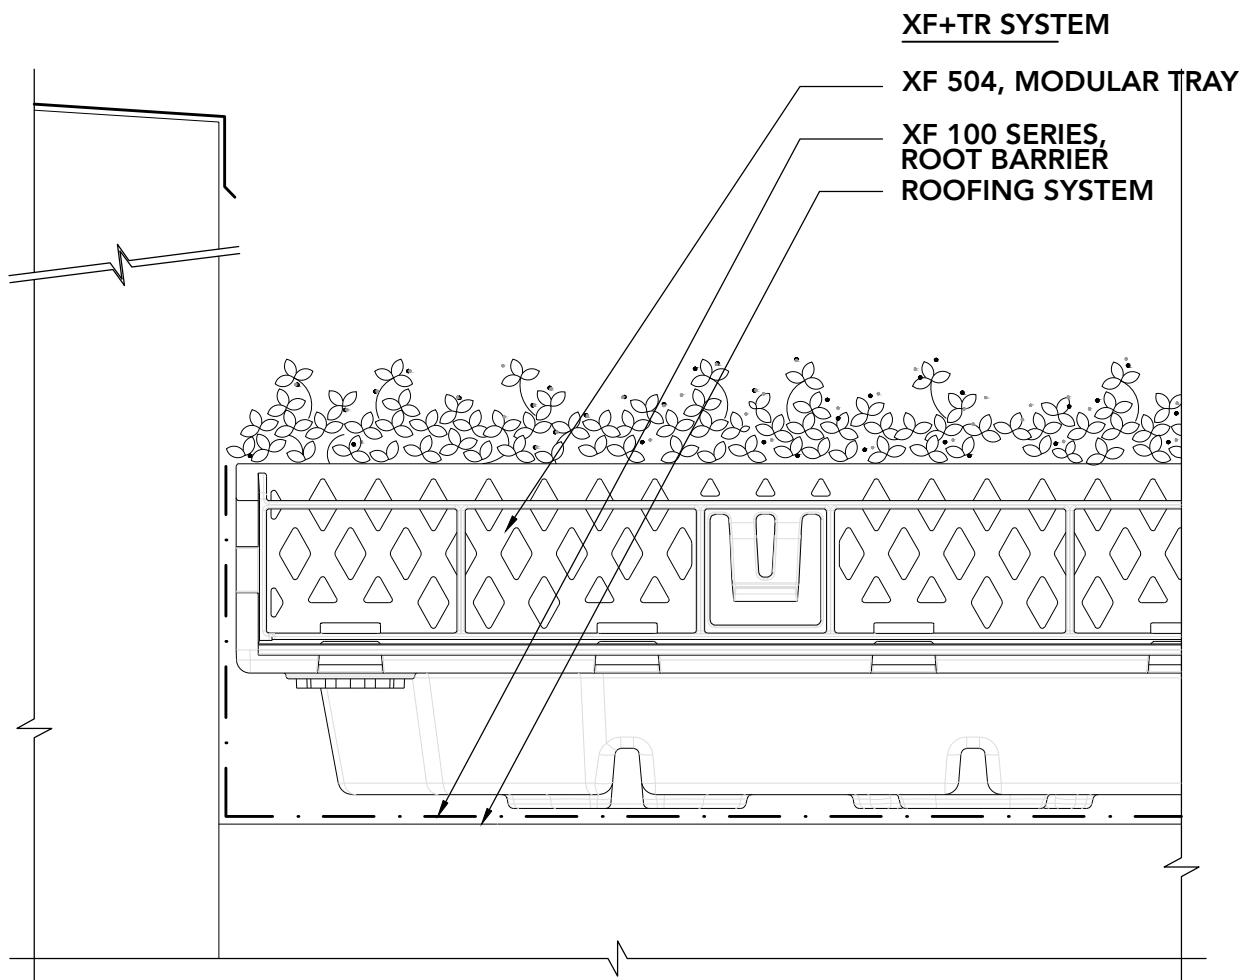

NOTE:

1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

NORTH
AMERICA

XF+TR SYSTEM

Detail at Roof Parapet




SCALE 1:2

©2020

XF+TR SYSTEM

XF 504, MODULAR TRAY
XF 604, EDGING RESTRAINT
XF 100 SERIES, ROOT BARRIER
ROOFING SYSTEM
AGGREGATE

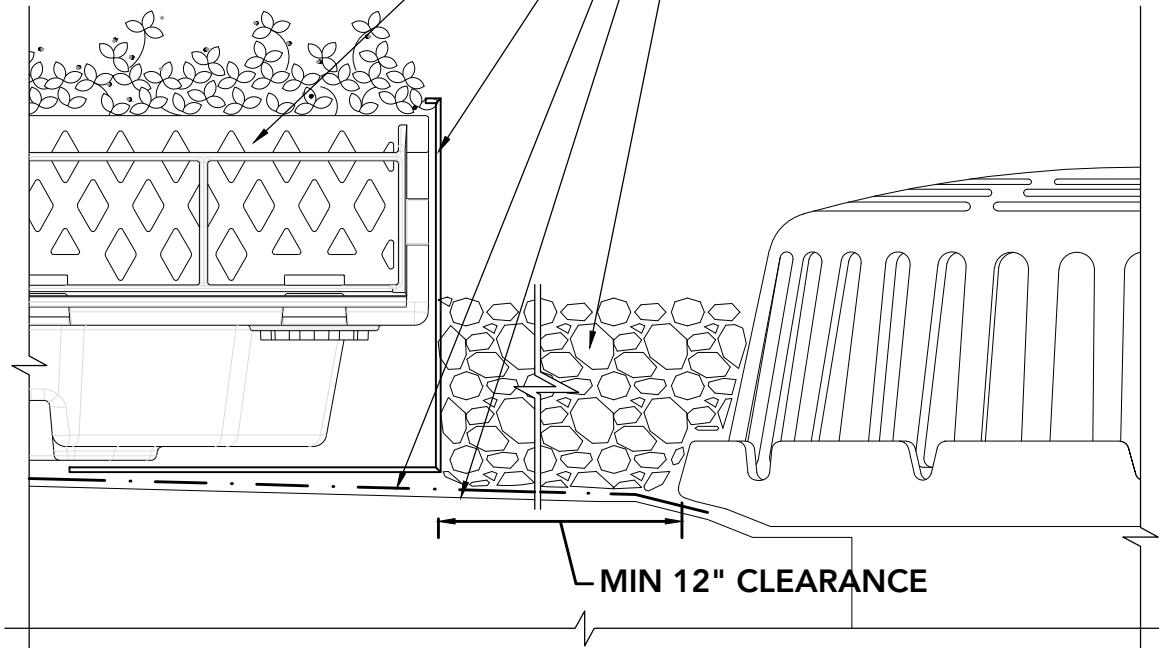

NOTE:

1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

NORTH
AMERICA


XF+TR SYSTEM

Detail at Roof Drain



SCALE 1:2

©2020

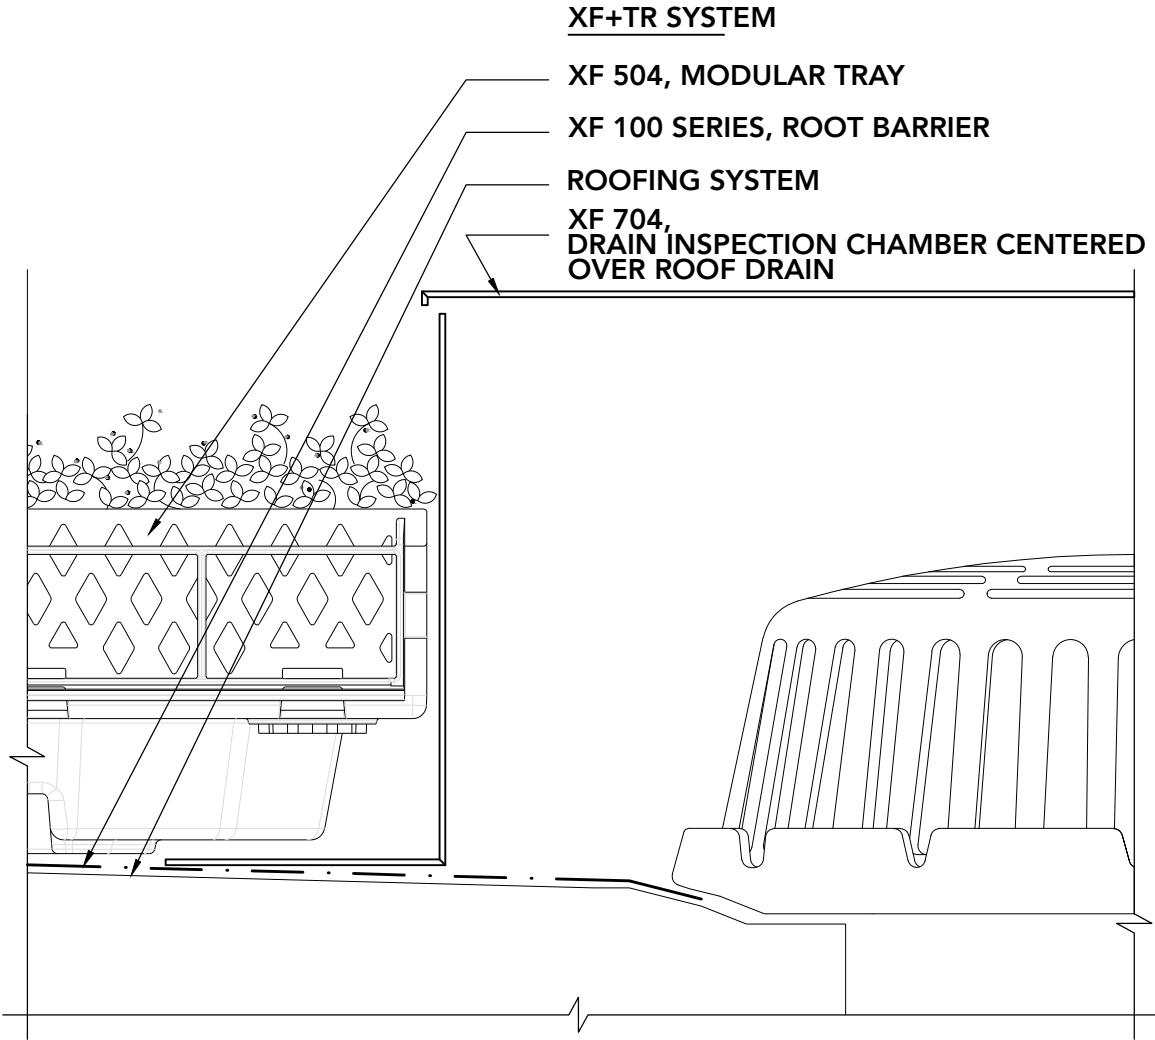

NOTE:

1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.




WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

NORTH
AMERICA


XF+TR SYSTEM

Detail at Roof Drain



SCALE 1:2

©2020

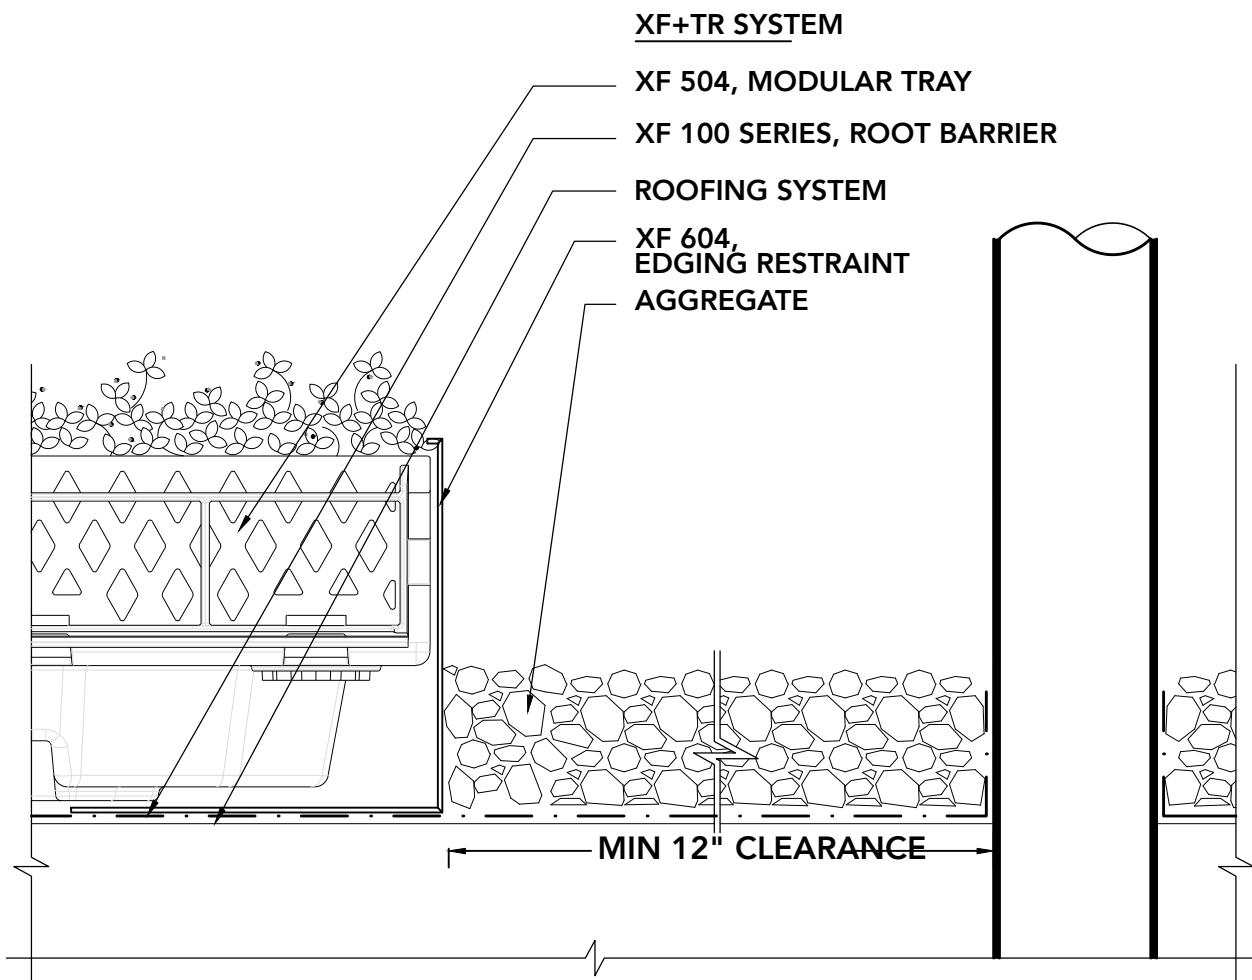

NOTE:

1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.




WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

NORTH
AMERICA


XF+TR SYSTEM

Detail at Roof Penetration




SCALE 1:2


©2020

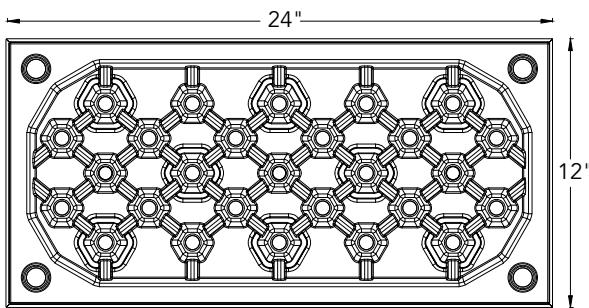


Plan View

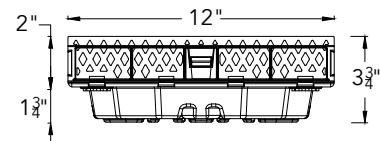

Side View

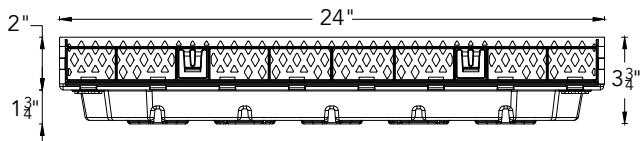

Side View

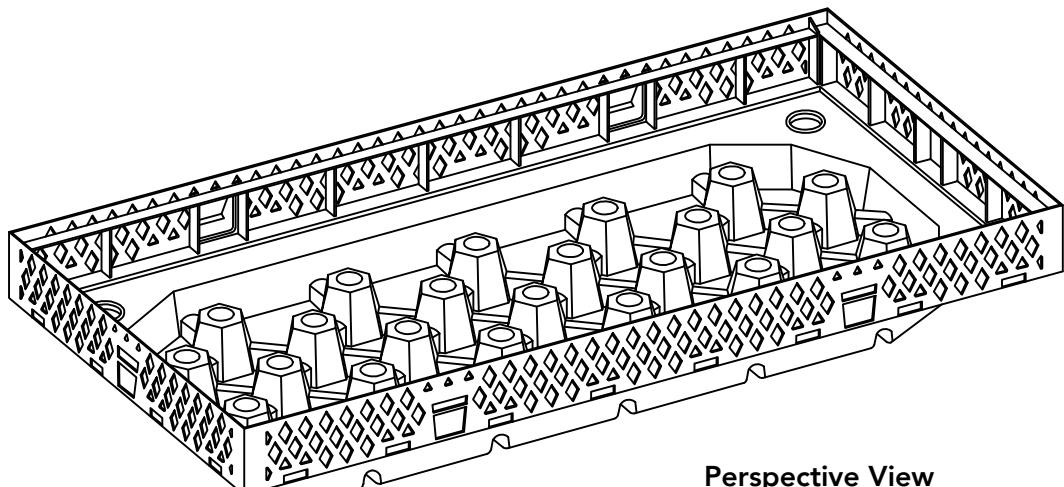

Perspective View

NOTE:

- 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.
- 2- INSTALL INSULATION DIRECTLY ON TOP OF ROOT BARRIER
- 3- ROOF INSULATION NOT TO SCALE



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

NORTH
AMERICA

XF+TR SYSTEM


Tray Detail

SCALE NA

©2020

XF+TR SYSTEM

XF 504, MODULAR TRAY
XF 100 SERIES ROOT BARRIER
ROOFING SYSTEM

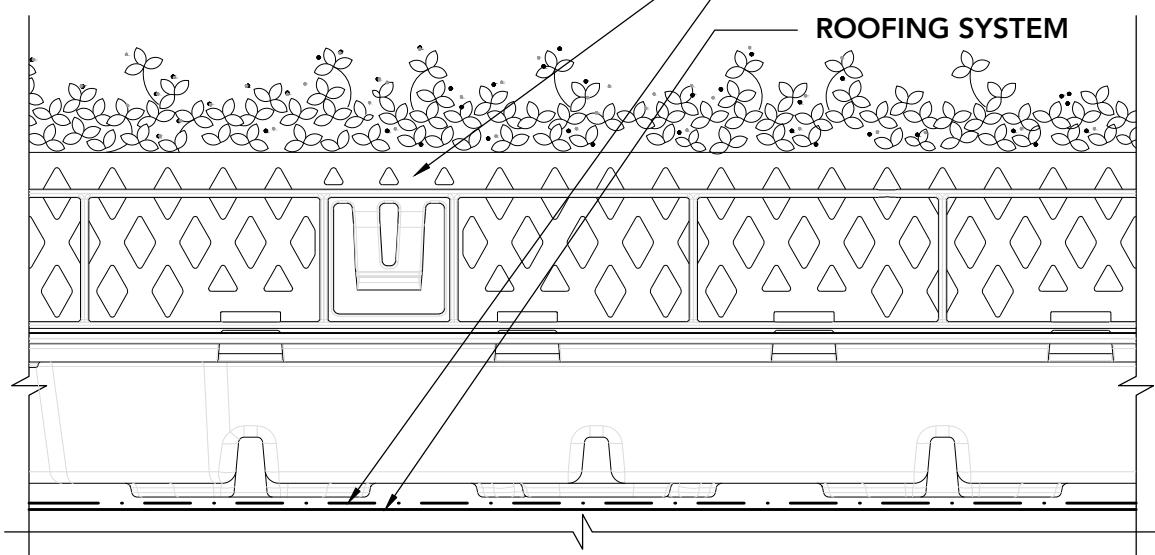

NOTE:

1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

NORTH
AMERICA


XF+TR SYSTEM

Standard Layers



SCALE 1:2

©2020

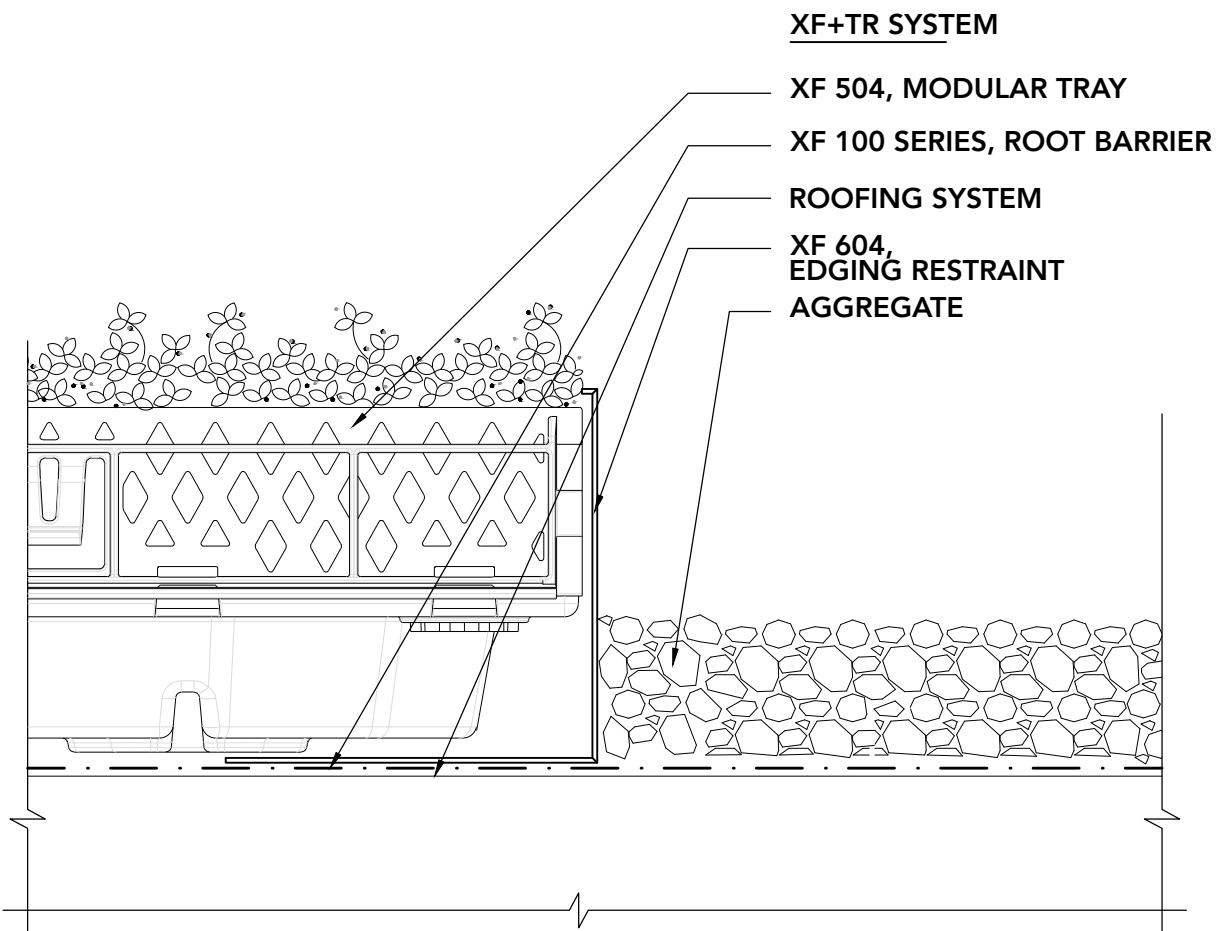

NOTE:

1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

NORTH
AMERICA

XF+TR SYSTEM


Detail at Vegetation Free Zone



SCALE 1:2

©2020

XF+TR SYSTEM

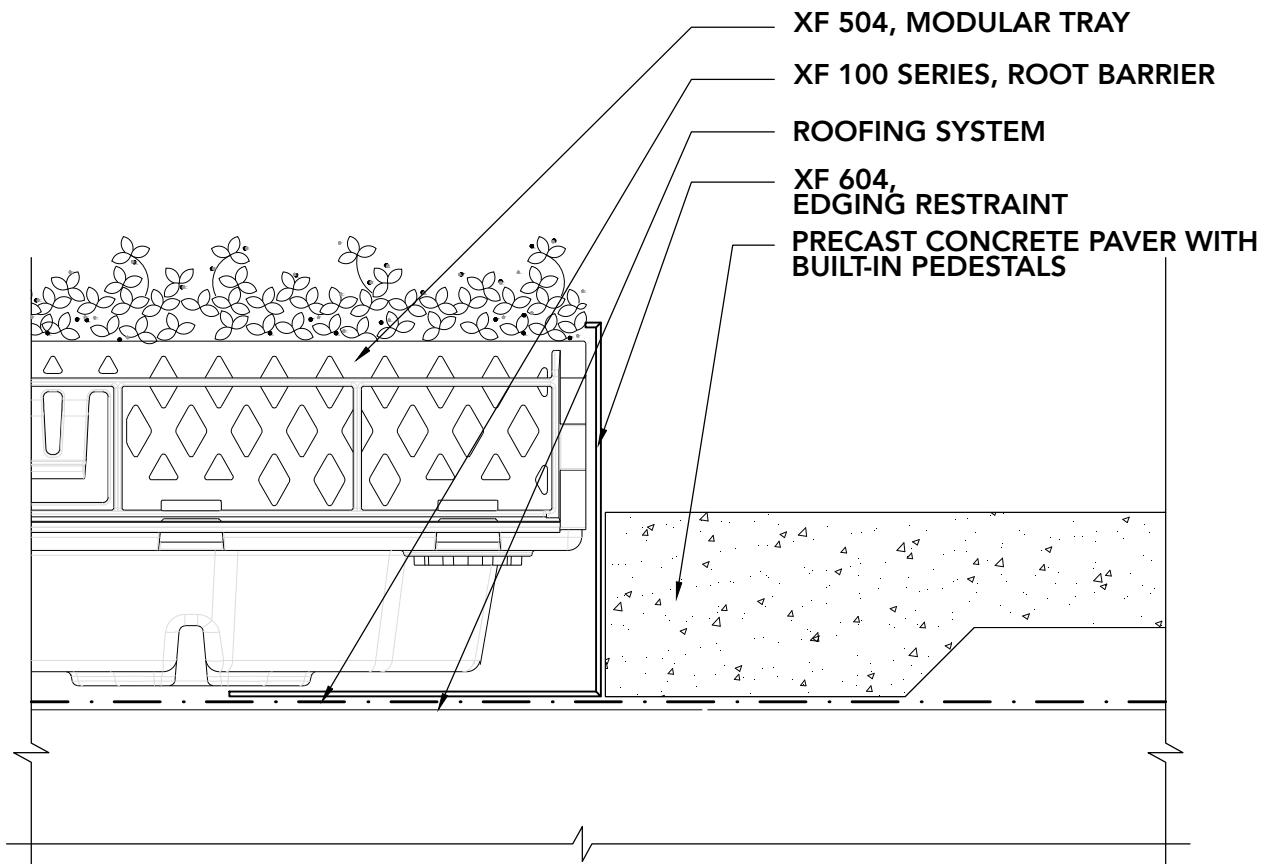

NOTE:

1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

NORTH
AMERICA

XF+TR SYSTEM

Detail at Vegetation Free Zone



SCALE 1:2

©2020