



INSTALLATION  
TO START  
FROM LEFT  
CORNER



XF + TR 24" X 12"  
PRE-VEGETATED MODULE

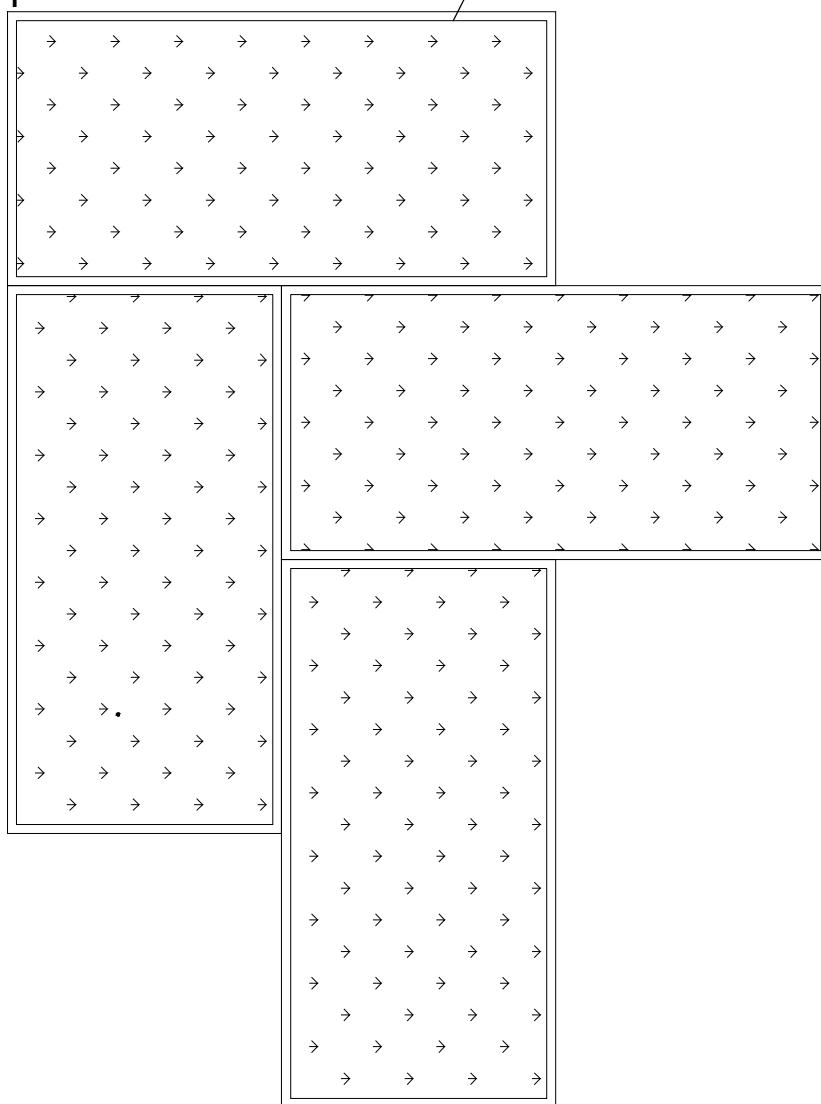

NOTE:

- 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.
- 2- INSTALL INSULATION DIRECTLY ON TOP OF ROOT BARRIER
- 3- ROOF INSULATION NOT TO SCALE



WWW.XEROFLORNORTHAMERICA.COM  
TOLL FREE: 1-866-335-1151

NORTH  
AMERICA

**XF+TR SYSTEM**

Tray Detail

SCALE N/A

©2020