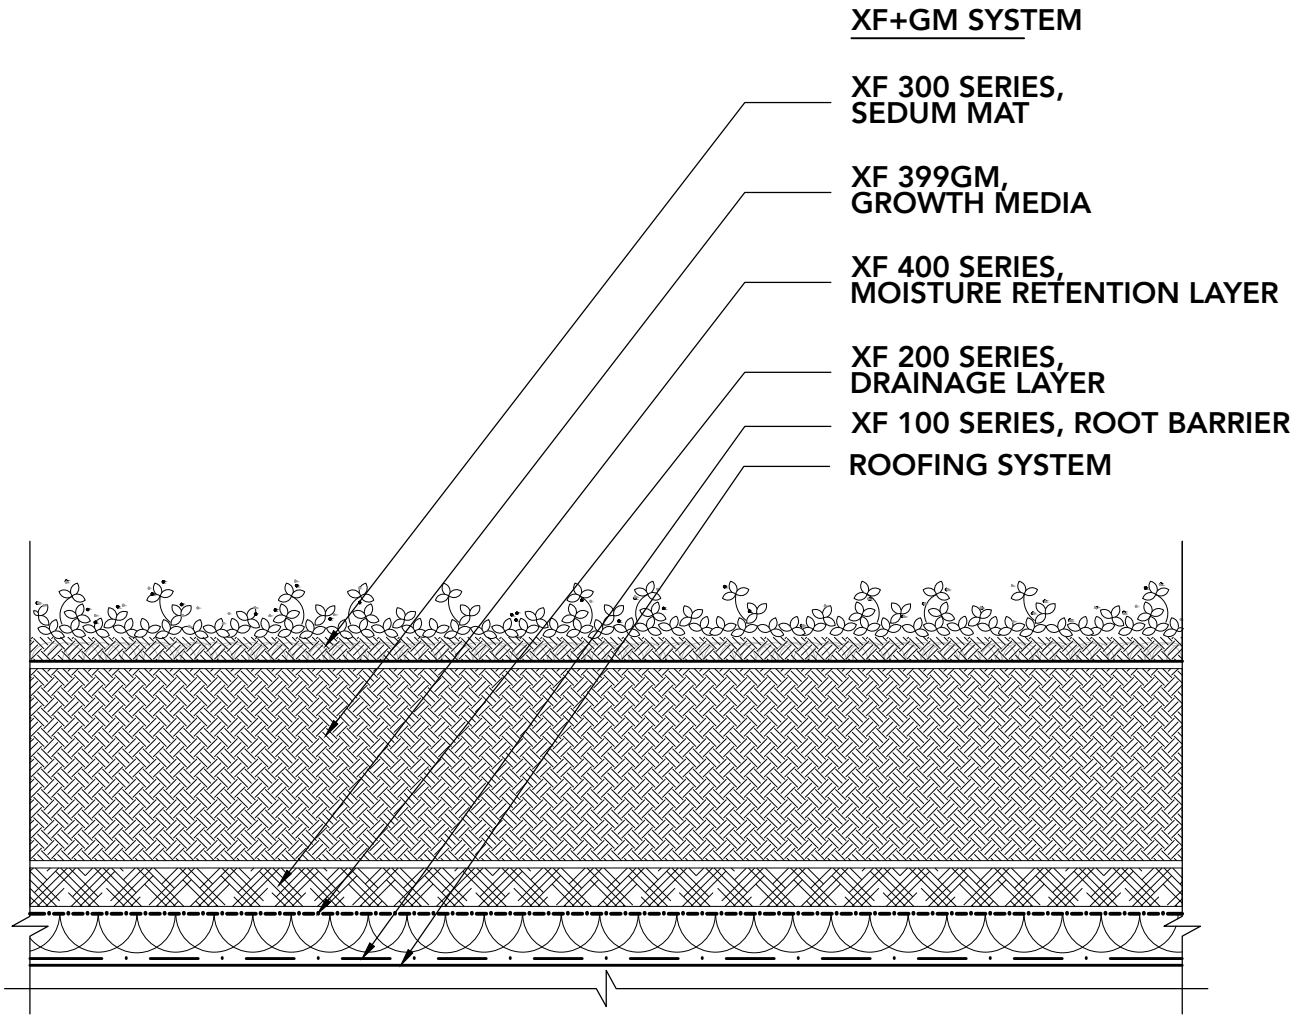

NOTE:
1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

xeroflor NORTH AMERICA
WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+GM SYSTEM

Standard Layers

0 1/2" 1" 2" 4"

SCALE 1:2

©2020